



BP3-10 Belt Pack Microphone Volume & Sensitivity Adjustment Procedure:

1. With the belt pack power off, hold down the PTT button.
2. Turn power on to the belt pack, release the PTT button within 3 seconds after the red LED turns off; the red LED will flash 3 consecutive times to indicate microphone adjustment mode is active.
3. Wait until the belt pack connects to its host base station.
4. Press the PTT button momentarily then release; the number of times the red LED flashes indicates the level of microphone volume and sensitivity settings combination. The higher the number of flashes the lower the microphone volume and the higher the mic sensitivity. There are 16 settings available depending on the average ambient noise levels (factory settings shown in graph above).
5. To test the selected setting without exiting microphone adjustment mode, turn power off (a few seconds) to the belt pack, and then turn it back on.
6. Test the microphone for the desired volume and sensitivity combination. If you are not satisfied, repeat steps 4-6.
7. To save the setting and exit adjustment mode, turn belt pack power off and wait until the belt pack disconnects from the base station.
8. Turn belt pack power on without holding the PTT button. The belt pack will enter normal operating mode and connect to the base station.